



TOWERS ROOM DIMENSIONS:

Towers North Rooms: X51, X55, X59, X63, X67, X70, X74, X78, X82, X86

Towers South Rooms: X02, X06, X10, X14, X18, X21, X25, X29, X33

X=FLOOR LEVEL